


Part Number	Cam Brake installation instruction	Print Number		Drawn By	GRS
Material	MSP-135	Date		Rev	Change Note
				01	Created / Converted to TurboCAD

- 1. REMOVE EXISTING AXLE & SPANNER BUSHING
- 2. PUT NEW SPANNER BUSHING IN WHEEL
- 3. GREASE INDENTATIONS IN CAM BRAKE LEVER (helps to hold balls in place)

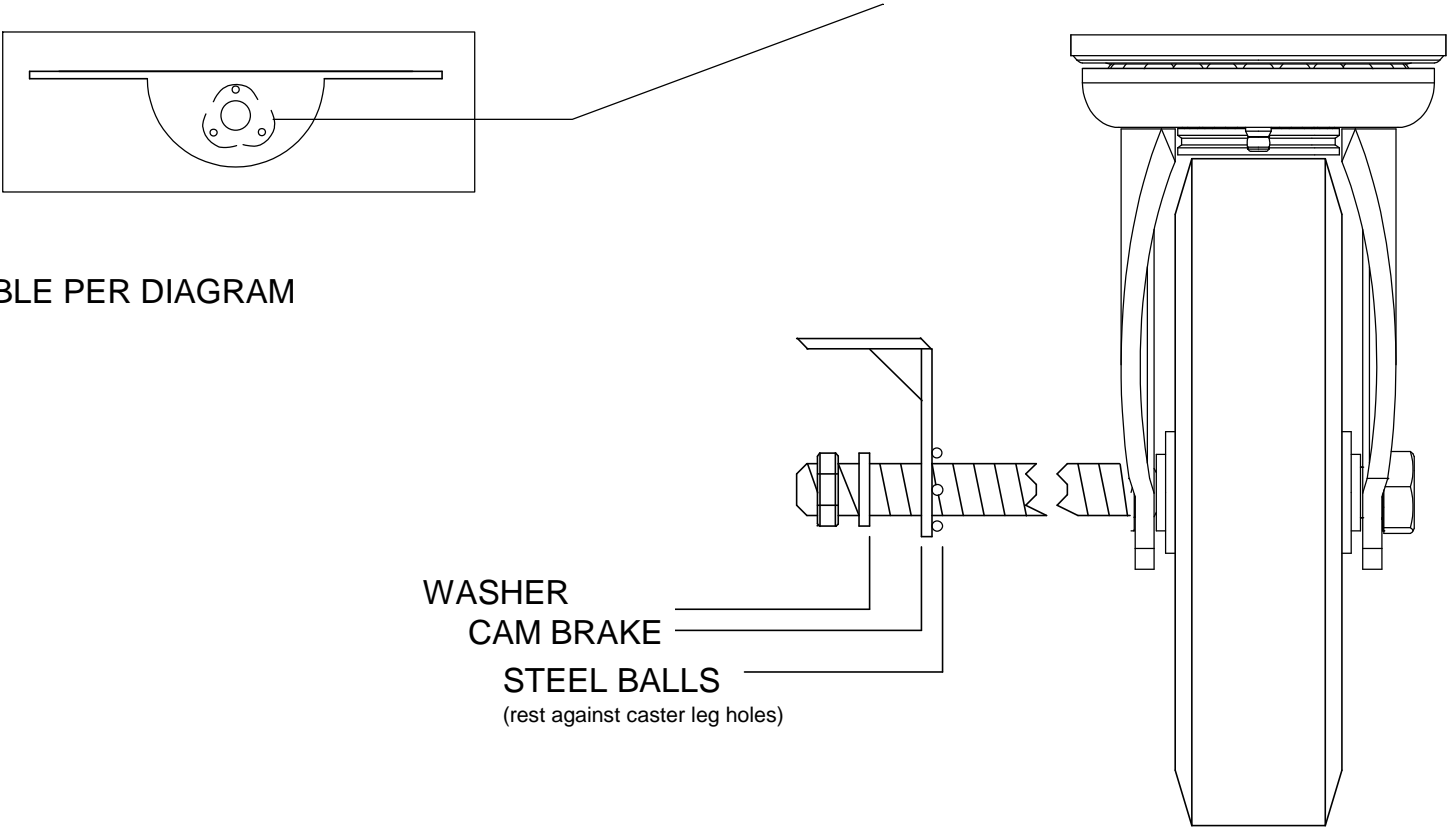

4. ASSEMBLE PER DIAGRAM